

## N3BYR Node Cheat Sheet

### SSID's:

- N3BYR-7 Main Node/Switch/Digipeater
- N3BYR-10 Winlink / RMS Gateway
- N3BYR-1 BBS/Winlink/Bulletins
- N3BYR-12 Multi-station Chat System

N3BYR-7 Main Node Menu Cheat (Use "s" when changing modes to "Stay" connected after exiting the mode. E.G. "c 2 KK4IB-1 s" will cause you to drop back to the N3BYR node after disconnecting from KK4IB-1, otherwise all nodes disconnect.

- ? Menu
- Ports List Ports available and ID number
- MHU # List stations heard on port # (Use "LIS #" to listen to a port!)
- RMS Move to RMS Gateway mode
- BBS Move to BBS mode
- Chat Move to Chat mode
- Connect Connect to station using port X – E.G. "C 2 KK4IB-1"
- BYE Hangup
- Info Get Information on Node
- Nodes Get list of reachable nodes from this node
- Routes Show available routes from node
- Users List actively connected stations/users
- MHEARD Same as MHU

NOTE: Nodes listed as reachable do not need port numbers to connect (In most cases)

### N3BYR-1 BBS System

- ? Help Menu – Very useful!
- S Callsign Send a message to user. Use callsign "S N3BYR"
- SR # Send a reply to message you read by message #, e.g., "sr 2199"
- SB cat@distro Send a bulletin to Category @ Distro (e.g. TECH@WW is technet WW)
- L List all messages since last read \*BE Careful!\*
- LL # List last # of messages. "LL 40" lists last 40 messages in system
- L #-# List messages # through #: "L 1200-1235" lists those messages
- LM List my messages, or messages to me in the BBS System
- CMSPASS \*\*\* Set the password for your Winlink account (Sysop cannot see)
- POLLRMS "enable" or "disable" Winlink RMS message usage "Pollrms enable"
- HOMEBBS Set or view your home BBS

NOTE: If you want to set your local station as your home BBS please reach out to me so that I can set up the message forwarding. I recommend instead just setting your HomeBBS to "N3BYR.#CGA.GA.USA.NOAM" which is broken down to the N3BYR Node, Central GA region, Georgia, USA, North America.

## N3BYR-12 Chat System

- /? Help Menu – Very Useful
- /n Set your name
- /q Set your QTH
- /t Show Topics/Channels
- /t [Topic] Join topic/channel
- /keepalive Prevent idle disconnect from chat
- /time toggle timestamps in chat
- /b leave chat

NOTE: Anything typed without a “/” is sent to the rest of the stations in the chat topic you are currently in. “General” is the entry topic for all stations and is automagically set.

Within the N3BYR-7 partition of the node, I have various sub-modules that are activated occasionally. These sub-modules are to support various uses including EmComm needs and include secondary chat links at other nodes, internet access via a text-based web browser, and more. I will turn these modules on for testing occasionally and will announce when they are available and why they are available when it’s possible to make those announcements